

Collecting Dust Samples

1 Fill out sample form



2 Collect near equipment or in collector




3 Put sample in unbreakable, secure packaging



Shipping Sample

4 Put MSDS, PO, Sample Form & bag in box

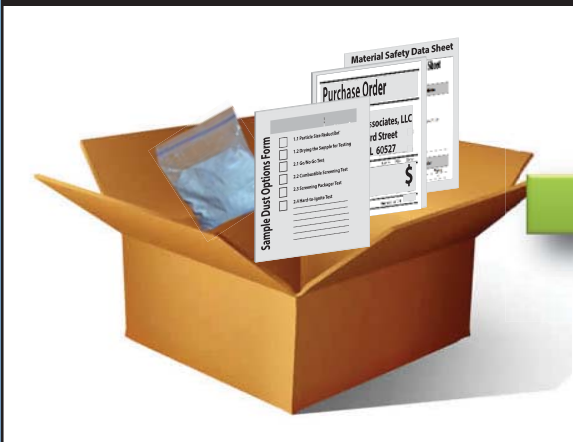

5 Ship per regulation



6 We will contact you when we receive your dust sample



2a

Guidelines to ensure that you are sending enough material for testing



Is the sample light and/or fluffy?

If so, you will have to collect a larger VOLUME in order to have enough based on WEIGHT.



Are you collecting a sample in a jar or other container?

Be sure that you take the weight of that container into account when weighing the material.



Did you select Item 1.0 - Particle Size Reduction?

If so, please send at least 50% additional material.
(There is always a loss of usable material that results from the grinding/sieving process)